


















Agility 4



Quick User Guide

This describes main user operations. For the full user manual, see our website:
www.riscogroup.com/uk

Full Setting	
 <ul style="list-style-type: none">❖ Quick mode: Press  .❖ High security mode: Press , then enter code or use proximity tag.	 Press 
 <ul style="list-style-type: none">❖ Quick mode: Press  .❖ High security mode: Press , then enter code or use proximity tag.	 <ul style="list-style-type: none">❖ Quick mode: Press  .❖ High security mode: Press , then enter code.
 [Web application]: Click Full Set .	 [SMS]: Enter code + S Example: 1234S
 Press 	 [Smartphone App]: Press 

Part Setting





- ❖ **Quick mode:** Press .
- ❖ **High security mode:** Press , then enter **code** or use **proximity tag**.





Press 



- ❖ **Quick mode:** Press .
- ❖ **High security mode:** Press , then enter **code** or use **proximity tag**.



- ❖ **Quick mode:** Press .
- ❖ **High security mode:** Press , then enter **code**.



[Web application]: Click Part Set.



[SMS]: Enter **code + P**
Example: **1234P**.







Press 







[Smartphone App]: Press 

Partition Setting


 




- ❖ **Quick mode:** Press partition number (1-3), then press Full Setting () or Part Setting ()
- ❖ **High security mode:** Press partition number (1-3), press Full Setting () or Part Setting () , then enter **code** or use **proximity tag**.



- ❖ **High security mode:** Press partition number (1-3), press Full Setting () or Part Setting () , then enter **code**.
- ❖ **Quick mode:** Press partition number (1-3), then press Full Setting () or Part Setting ()



- ❖ **Quick mode:** Press partition number (1-3), then press Full Setting () or Part Setting ()
- ❖ **High security mode:** Press partition number (1-3), press Full Setting () or Part Setting () , then enter **code** or use **proximity tag**.










[SMS]: Enter **code + S (Full) or P (Part)**. Now enter partition number (1-3). Example: **1234P3**.



Partition Setting (Full and Part) via Smartphone App.

Quick Zone Omit







Press  and enter code, at **Activities** menu press  , at **Omit Zone** press  , scroll to zone to Omit, press  .



Quick zone Omit via Smartphone App.




Press  and enter code, at **Activities** menu press , at **Omit Zone** press , scroll to zone to Omit, press .

System Unsetting



Press  then enter **code** or use **proximity tag**.



Press  then enter **code** or use **proximity tag**.





Press .



Press .



❖ **Quick mode:** Press .

❖ **High security mode:** Press , then enter **code**.




[SMS]: Enter **code + US**
Example: **1234US**.




[Web Application]: Enter **user code**, then click **Unset**.




[Smartphone app]: Press .

Partition Unsetting




Press partition no. (1-3), press .
Enter **code** or use **proximity tag**.




Press partition no. (1-3), press . Enter **code** or use **proximity tag**.



Press  (for all assigned partitions)





Press  (for all assigned partitions)



Partition unsetting via Smartphone App.



❖ **Quick mode:** Press partition number (1-3), then press .

❖ **High security mode:** Press partition number (1-3), press , enter **code**.





[SMS]: Enter **code** + **US** + partition number (1-3). Example: **1234US2**





View / Hear System Status



NOTE: Short-press for LCD display, or long-press for display + announcement.

❖ **Quick mode:** Press  

High Security mode: Press  , then enter **code** or use **proximity tag**.




View system status via Smartphone App.




NOTE: Short-press for LCD display, or long-press for display + announcement.

❖ **Quick mode:** Press 

❖ **High Security mode:** Press , then enter **code** or use **proximity tag**.

View Last Alarm


















Press  for two seconds.















 





 




View last alarm from Event log via **Smartphone App**.














Press  for two seconds.

Panic Alarm	
 <p>Press  and  simultaneously.</p>	 <p>Press  and  simultaneously.</p>
 <p>Press  and  simultaneously.</p>	 <p>Press  and  simultaneously.</p>
 <p>Press small button (if installer defined).</p>	






Additional Operations at LCD Keypad	
Duress Unsetting	Press  , then enter duress code .
Fire Alarm	Press  and  /  and  (Panda Keypad) simultaneously for 2 seconds.
Emergency/Medical Alarm	Press  and  /  and  (Panda Keypad) simultaneously for 2 seconds.
System Chime On/Off	Press  for 2 seconds.
Output Control	Press  ,  , or  (installer-defined) for 2 seconds.
Wake up keypad	Press   .
Main Panel Speaker Volume	Press  for 2 seconds. Select volume level (0-4), and then press    .
Change keypad and panel language	Press   and  simultaneously for 2 seconds. Scroll to select language, then press  (Panda Keypad)

SMS Commands	
Full Set: code + S (Example: 12345)	Omit Zone: code + OM + zone number
Part Set: code + P	Un-omit Zone: code + UNOM + zone number
Unset: code + US	View last alarm: code + AL
Partition Full Set: code + S + partition number	Activate Output: code + POON + UO number
Partition Part Set: code + P + partition number	
Partition Unset: code + US + partition number	Deactivate Output: code + POOFF + PO number
Get system status: code + ST	






Telephone Event Notifications / Command*		
<p>When Receiving a Call:</p> <ol style="list-style-type: none"> Pick up the phone and say “Hello” or press #; You will then hear an event announcement message. Now acknowledge the event (see Acknowledgment menu). 	<p>Acknowledgment Menu</p> <ul style="list-style-type: none"> ❖ Acknowledge message: Press 1 ❖ Acknowledge and stop all dialing: Press 2 + code + # ❖ Access Operations menu: Press 3 + code + # ❖ Listen and Talk: Press 6 ❖ Repeat event message: Press # ❖ Repeat the Acknowledgment menu: Press * 	
Sound Indicators		
Intrusion alarm:	Continuous, rapid beeping.	
Fire alarm:	Staggered, rapid beeping.	
Exit delay:	Slow buzzer beeps until the Exit Delay time expires.	
Entry delay:	Slow buzzer beeps until the Entry Delay time expires.	
Confirm operation:	1-second tone.	
Reject operation:	Three rapid error beeps.	
Set/Unset chirp:	1 sounder chirp = system set 2 sounder chirps = system is unset 4 sounder chirps = system unset after an alarm	
LED Indicators (Wireless Agility Keypad RW132KP)		
<p> Power LED (Green) On: Power OK. Rapid Flash: AC Fault. Slow Flash: Low battery Fault.</p>	<p> Set/Alarm LED (Red) On: System fully Set. Rapid Flash: Alarm. Slow Flash: System in Exit Delay.</p>	<p> Ready LED (Green) On: System ready. Off: Open zones. Slow Flash: Ready to Set with open entry/exit zone.</p>
<p> Fault LED (Amber) Rapid Flash: Fault. Off: No Fault.</p>	<p>[All LEDs] Learn mode: all LEDs are flashing, one after the other.</p>	<p> Part Set LED (Red) On: System partially set. Off: System unset.</p>
LED Indicators (Wireless Panda Keypad RW332KP)		
<p> Cloud Icon On: System connected to cloud. Slow Flash: Cloud connectivity fault. Off: No cloud connectivity</p>	<p> Set/Alarm Icon On: System set. Rapid Flash: Alarm. Slow Flash: System in Exit Delay. Off: Unset</p>	<p> Ready Icon On: System ready. Off: Open zones. Slow Flash: Ready to set with open entry/exit zone.</p>
<p> Fault Icon On: Fault. Off: No Fault.</p>	<p> Tamper Icon On: Zone/keypad/external module has been tampered. Off: Normal operation.</p>	<p> Part Set Icon On: System part set or omitted zones. Off: No omitted zones.</p>

* Not available during Cloud mode unless a multi-socket communication module is installed.

Assign and Edit Users (User Codes)

1. Press  and enter **code**.
2. Scroll to **Codes/Tags**, then press .
3. Scroll to **User Codes**, then press .
4. Scroll to **New/Change**, then press .
5. Scroll to select the **index number** (to designate to a system user), then press .
6. Enter (or re-enter) the **new code**.
7. Re-enter the **new code**; the system beeps and “Accepted” displays.
8. Repeat the above steps for additional codes.

Assign Proximity Tag

1. Press  and enter **code**.
2. Scroll to **Codes/Tags**, then press .
3. Scroll to **Proximity Tags**, then press .
4. Scroll to **New/Change**, then press .
5. Scroll to select the **index number** (to designate to a proximity tag user), then press .
6. Within 10 seconds, hold the proximity tag at 1–2 cm from the keypad buttons; a long beep indicates the tag has been registered.
NOTE: If the tag was already registered, 3 beeps will sound and a message will display.

Registering to the RISCO Cloud

- 1 Go to www.riscocloud.com and click **Register**.
- 2 Enter your first name and last name.
- 3 Enter your email address as Login Name (required for 1st time activation).
- 4 Define password (must be: a minimum of eight characters; contain at least one capital letter and one lower case letter; contain at least one number; and contain at least one special symbol) and confirm.
- 5 Enter in the 15 digits Panel ID as it appears: on the postcard that arrived with the panel or supplied by the installer (also available in the keypad menu as described below).
- 6 Complete registration form and click **Register**.
- 7 To complete registration open the email message received on the email account you defined as Login Name.

Logging in to the RISCO Cloud / Accessing the Web User Application

- 1 Go to www.riscocloud.com
- 2 Enter User Name and Password (same as supplied during the registration process).
- 3 Enter Passcode/PIN (Agility4 User Code).
- 4 Click **Enter**.

iRISCO Smartphone App

Download the iRISCO Smartphone app from the Apple App store or the Android Play Store.

